Exploded View

Important! Before proceeding with installation, please check for the most up-to-date instructions at **www.thermalright.com**

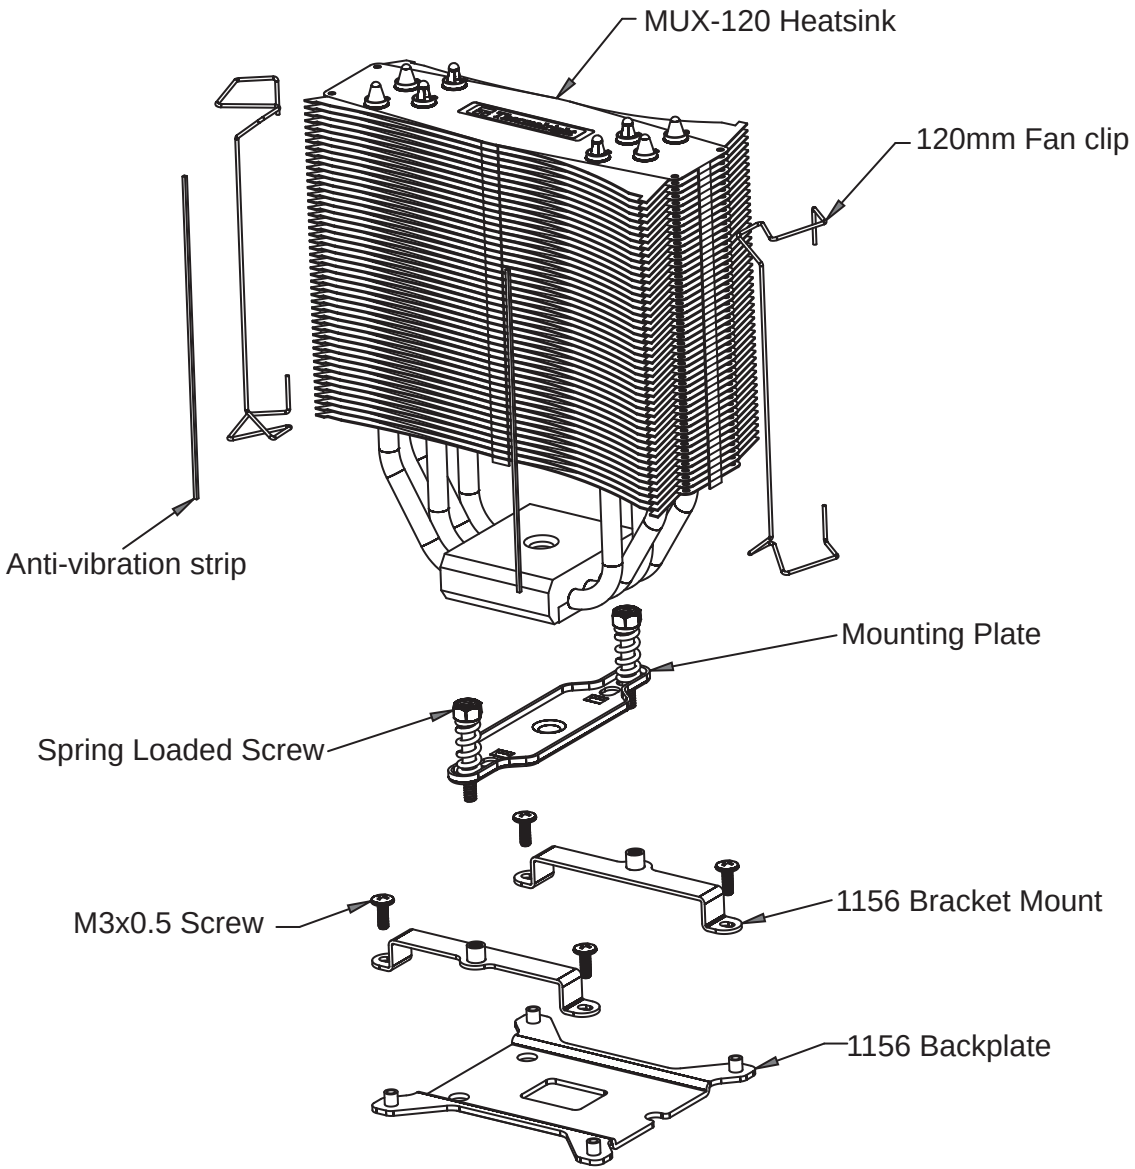

Component

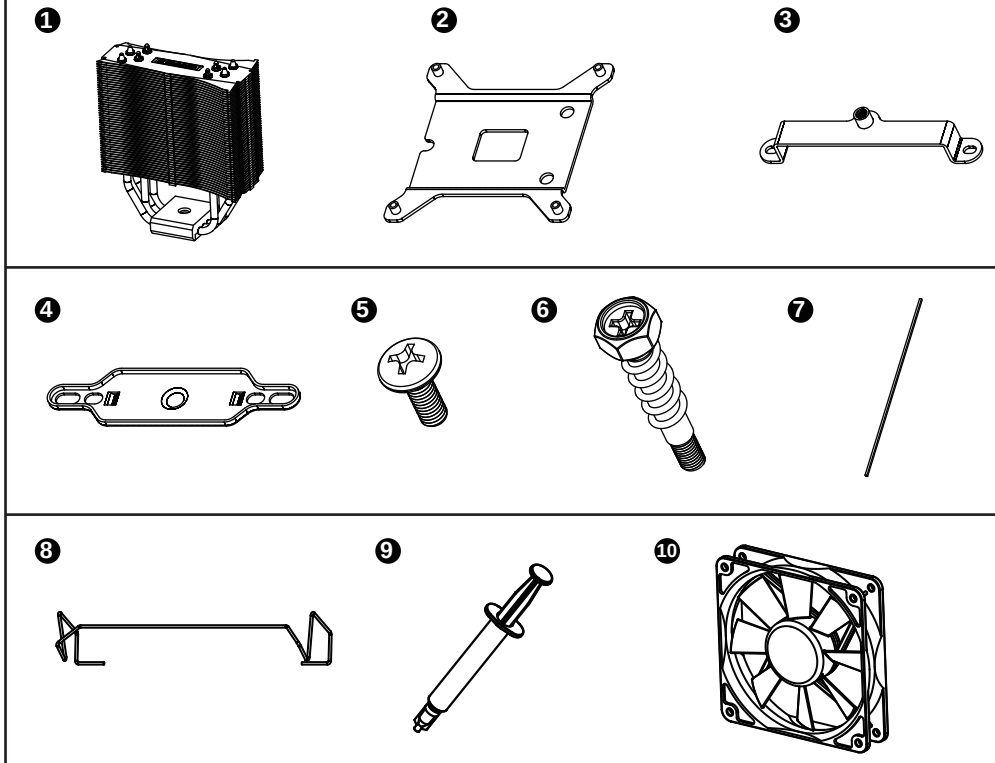

Parts Name	Piece(s)	Parts Name	Piece(s)
❶ MUX-120 Heatsink	1	❷ 1156 Backplate	1
❸ 1156 Bracket Mount	2	❹ Mounting Plate	1
❺ M3x0.5 Screw	4	❻ Spring Loaded Screw	2
❼ Anti-vibration strip	4	❽ 120mm Fan clip	4
❾ Chill Factor 2 Thermal Paste	1	❿ X-Silent 120mm Fan	1

Installation Guide

Important! Before proceeding with installation, please check for the most up-to-date instructions at **www.thermalright.com**

Step 1:

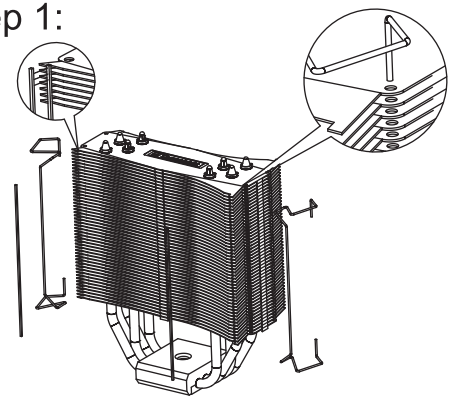

Step 1：Accessory Installation

Apply the anti-vibration strips to each side of heatsink. Insert each end of the fan wire into the designated holes on the heatsink.

Step 2:

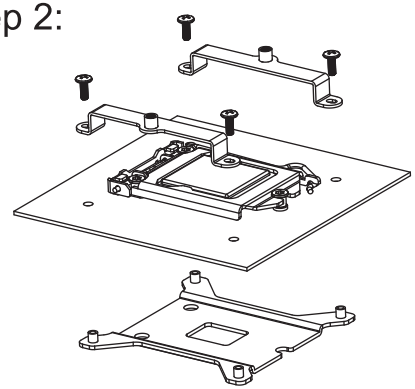

Step 2：Bracket Mount Installation

Use the four M3x0.5 screws to secure the 1156 bracket mount to the 1156 backplate with the motherboard in between.

Step 3:

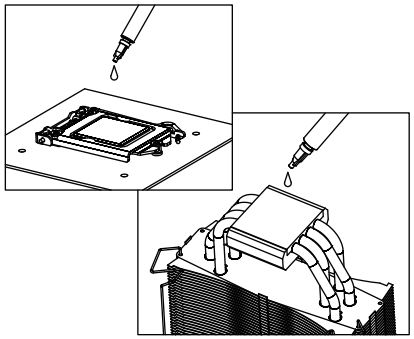

Step 3：Thermal Paste Application

Apply a thin evenly spread out layer of thermal paste to the CPU and to the bottom of the heatsink base.

Step 4:

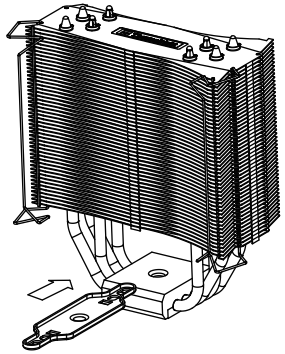

Step 4：Slide the mounting plate through between the heatpipes and place it in the dimple on top of the heatsink base.

Step 5:

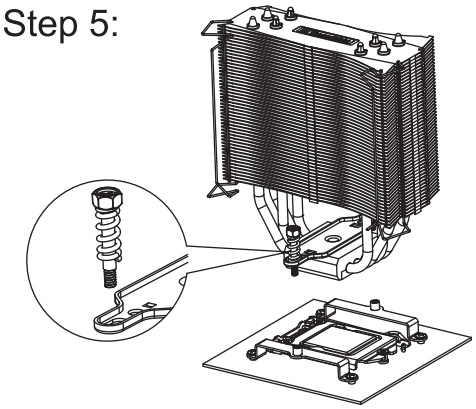

Step 5：Place the heatsink on top of CPU and secure in place by tightening on the spring loaded screws.

Step 6:

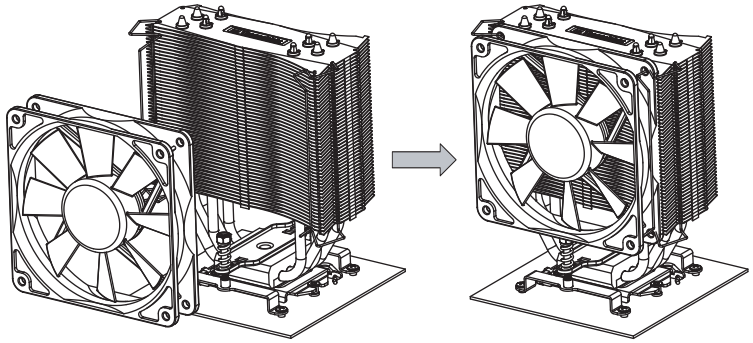

Step 6：Fan Installation

Place the 12 cm fan next to the heatsink. Pull on fan wire clips to hook into fan mounting holes. Plug in fan for power. Installation completed.

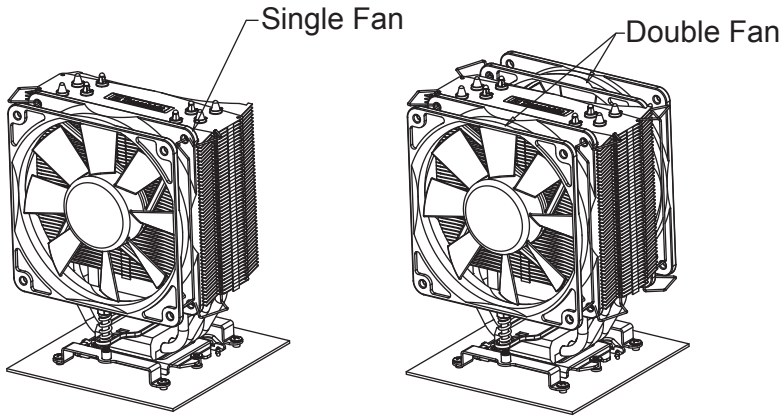

Double-fan Installation:

To install a second fan, simply follow the fan installation guide on the other side of the cooler to make for a push-pull airflow.